



**BLIND APEX INC.**

8990 Boul. Henri-Bourassa  
Charlesbourg, Quebec G1G 4E3  
Tél.: 418.651.0752 Fax: 418.651.9179

---

## **Blind Apex DisplayIT (HUD-9x) SETUP INSTRUCTIONS PLEASE READ**

**WARNING:** This product is equipped with a radio receiver that descrambles copyrighted radio signals. Any use of this product to tamper with, descramble, modify, or reproduce, in whole or in part, these signals in a manner not expressly authorized in writing by the manufacturer constitutes a violation of U.S. and international copyright laws.

### **Connecting the unit**

1. The unit requires a DC 12V power connection. (It will run from 9V to 14V)
2. A fused connection to your car battery is preferred.
3. You can connect either the black or white wire to the positive (+) terminal, and the remaining one to the negative (-) terminal. In other words: Polarity doesn't matter.
4. It is your responsibility to provide adequate electrical protection and proper connection. If you are not comfortable connecting the unit yourself please have the unit installed by a certified automotive mechanic.

### **Mounting the unit**

1. The unit has an internal antenna (see warning at the end of this document) that needs to be as high as possible. Mounting the unit on your steering wheel is good, on the dash is good... on the floor would be a poor choice and some information might be missed.
2. Make sure the unit is secured properly.

### **Setting-up the unit (AMB transponder number assignment)**

1. The 1st time you power the unit you will see a series of zeros '0', these digits represent your car's timing and scoring transponder number.
2. In order to work properly, the unit must be programmed with this number.
3. Use the right button (yellow circle) to rotate between values (0,1,2...etc)
4. Use the left button (yellow circle) to change digit.
5. **IMPORTANT:** The number assignment is done from RIGHT TO LEFT.
6. Example: Your transponder number is: 0087351
7. The screen must look like this: 000 008 73 51
8. Leave the leading zeros.
9. Once you reach the last digit on the left, press the left button one more time to complete the process.
10. When completed, the unit will display the main screen (Track Time, Laps, OA)
11. The unit is ready to be used.
12. You can press the 'ON' button, this will reset the unit and display your number for 1/2 second.

### **Entering a different transponder/transmitter number**



**BLIND APEX INC.**

8990 Boul. Henri-Bourassa  
Charlesbourg, Quebec G1G 4E3  
Tél.: 418.651.0752 Fax: 418.651.9179

---

## **(if you made a mistake or if you want to program a different number)**

1. From the main screen press AND hold the left button for approximately 5 seconds or until the transponder number is shown.
2. **IMPORTANT:** If the unit is near timing and scoring it might not enter transmitter programming mode since it might receive some signals from the tower. Wait until the current session is over and try again.
3. Use the right button to change the digits (0,1,2...etc)
4. Use the left button to switch to the next digit
5. **IMPORTANT:** The number is entered from right to left

## **TIPS AND VARIOUS INFORMATION ON THE UNIT**

- After 10 minutes of inactivity the unit will automatically enter "standby" mode. The screen will display 'OFF'. At this point the unit is using approximately 10mA of current. We recommend that you disconnect the unit if you are not using your vehicle for an extended period of time. (the unit uses approximately 85mA in normal operation mode).
- To turn on the unit after it went to standby mode simply press the ON button
- Your last **34** laps are stored in memory and can be recalled using the left button
- Pressing and holding the right button will clear the lap memory
- **NEW DisplayIT with the Blind Apex logo on top of the screen:** Your last 34 laps are stored in memory. The unit doesn't need to enter standby mode AND you can turn off the power without losing your lap times.
- Your unit is only as accurate as the timing system being used. The lap times are taken directly from the electronic system.
- The CP (Class position) field is only available using the optional timing software and appropriate cable.
- The OA (Over All Position) is only as accurate as the timing system. If the system is missing some cars, your position could be affected.
- Even though the information on this display is taken from the main timing system, it is NEVER to be considered official. Scoring on the DisplayIT is ALWAYS provisional!
- The unit is splash water resistant (rain is OK, but this is not diving equipment)
- Like any vehicle information display (RPM, engine temperature...) this unit can be distracting. Make sure that you are comfortable reading the unit and please... don't blame us if you get distracted... staring at your RPM display will have the same effect. You are using this product at your own risk!

This product comes with a 1 year warranty, don't open it, simply return it to us and we will fix it.




**BLIND APEX INC.**

8990 Boul. Henri-Bourassa  
Charlesbourg, Quebec G1G 4E3  
Tél.: 418.651.0752 Fax: 418.651.9179

**WARNING:** A NOT PROPERLY MOUNTED DISPLAY IT CAN BE EXTREMELY DANGEROUS. LIKE ANY OTHER EQUIPMENT THAT YOU INSTALL IN YOUR RACING VEHICLE, MAKE SURE IT IS SECURELY MOUNTED!

## Display Overview

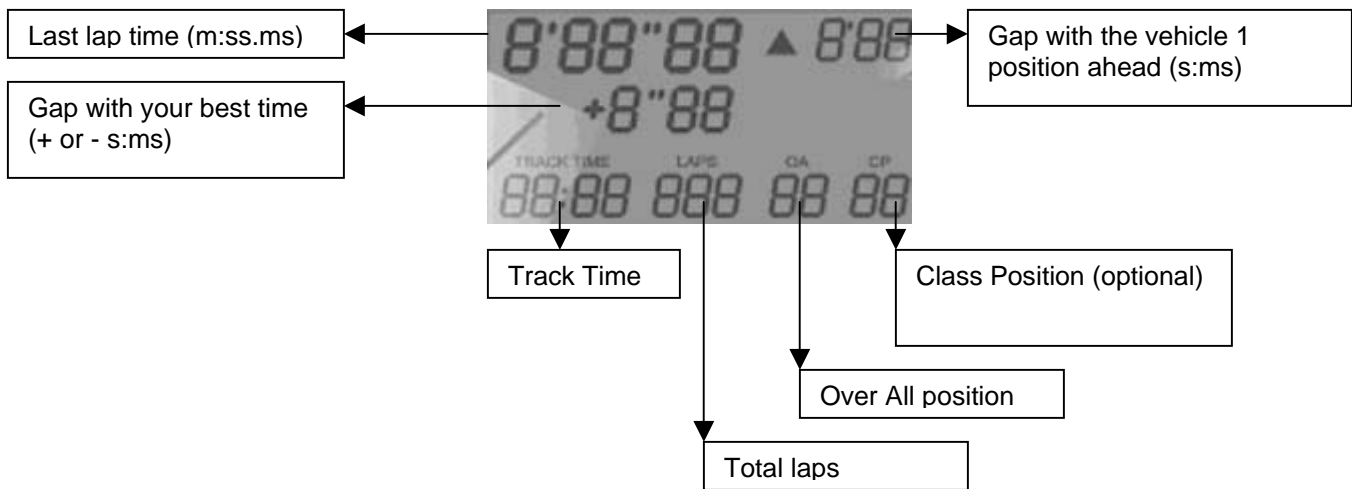

## CAUTION

**WARNING:** This equipment is approved only for mobile and base station transmitting devices, separation distances of 20 centimeters or more should be maintained between the antenna of this device and nearby persons during operation. To ensure compliance, operation at distances closer than this is not recommended.